

TECHNO TOY TUNING

STEEL POWER CRADLE ASSEMBLY

INSTALLATION INSTRUCTIONS

PACKING LIST:

- 2) Front fancy caps
- 2) Rear fancy caps
- 2) Power Cradle Blocks
- 2) Steel Power Braces
- 1) Steel Power Cradle
- 1) Hardware Pack

HARDWARE LIST:

Qty 8) 8x1.25x20mm Allen Head Bolts (**Power Brace to Fancy Cap**)

Qty 8) 10x1.25x35mm Allen Head Bolts (**Fancy Cap Bolts**)

Qty 4) 10x1.25x25mm Hex Head bolts and Nylocks and Flat Washers
(**Cradle to Brace**)

Qty 4) 10x1.25x30mm Allen Head Bolts and Flat washers

(**Block to Cradle**)

Qty 2) 12x1.25x130mm Bolts and Nylocks (**Block to Differential**)

Qty 2) 12x1.75x100mm Bolts and Flange Nuts (**Block to Differential**)

Qty 16) 12mm washers (**Depending on the Differential being Used**)




To being installing the power cradle, install the fancy caps first using the eight 10x1.25x35mm Allen Head bolts in place of the old factory control arm caps.

Torque to 30ft/lbs.




Orient the blocks as shown and bot them to the differential using the two 12x1.75x100mm bolt and flange nut. Torque to 50ft/lbs.

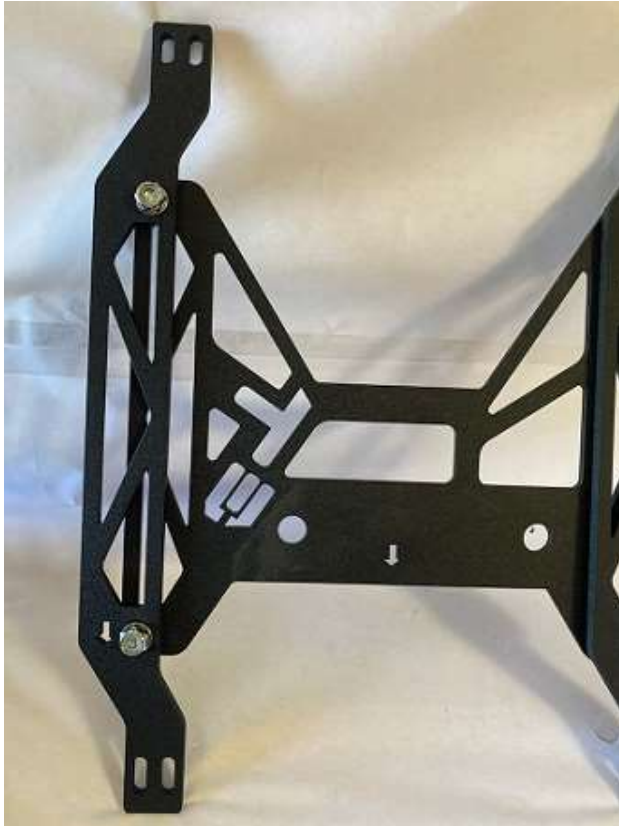

Bolt the power brace to the cradle using the four 10x1.25x30mm Hex heads and nylocks.



Align the eight 8x1.25x20mm allen head bolts up with the wholes of the fancy caps and bolt the power brace to the fancy cap. Torque to 30ft/lbs.

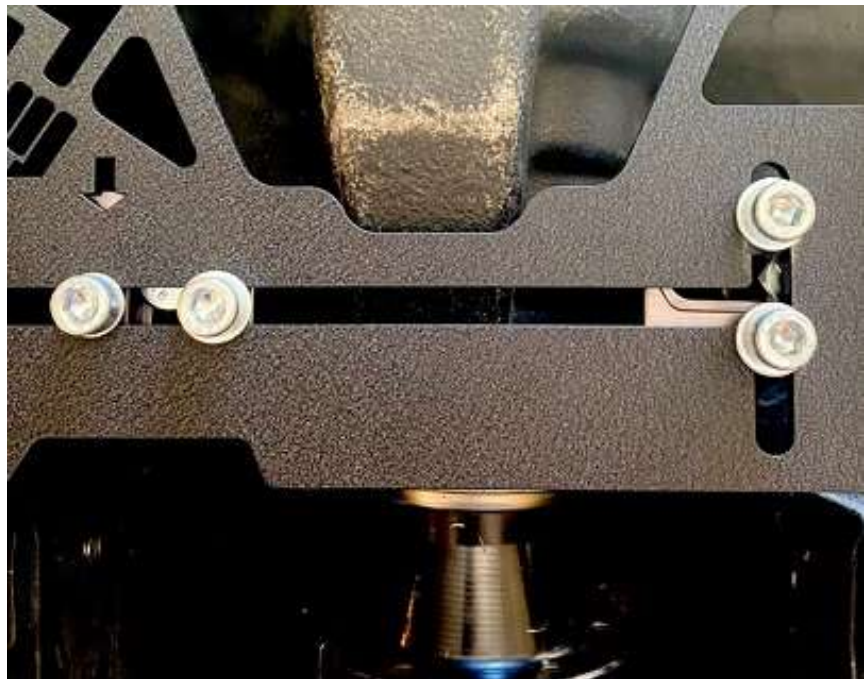

Bolt the power cradle to the to the blocks using the four 10x1.25x40mm Allen head bolts and Milspec washers. Torque the bolts to 30ft/lbs.



Once it's all bolted into the car and to the differential, double check all the bolts and make sure they are torqued. If everything is bolted up and tight you are ready to enjoy your new steel power cradle assembly!!

***WE HOPE YOU ENJOY THE
PERFORMANCE AND AESTHETICS OF
YOUR NEW TECHNO TOY TUNING
STEEL POWER CRADLE ASSEMBLY!!***

ANY QUESTIONS PLEASE E-MAIL

US AT

INFO@TECHNOTOYTUNING.COM